

LESSON 35 AN/FCC-100(V)7 & 9X PROGRAMMING PORT 14 FOR SYNC EQUIRATE NRZ 56 KBS CONFIGURATION

STEP	OPERATOR ACTION	MESSAGE DISPLAYED	SELECT
1	Press the RESTART key.		
2	Press the NEXT ENTRY P key.	ACTIVATE	
3	Press the NEXT ENTRY P key.	EXAMINE	
4	Press the NEXT ENTRY P key. (Select CONFIGURE using the DOWN B arrow key).	CONFIGURE	CONFIGURE
5	Select OFFLINE using the DOWN B arrow key.	OFFLINE	OFFLINE
6	Select B-CONFIG using the DOWN B arrow key.	B-CONFIG	B-CONFIG
7	If selection displayed is not PORT 14 , then scroll through the options by pressing the NEXT ENTRY P key until PORT 14 is displayed. (Select PORT 14 using the DOWN B arrow key).	SYSTEM PORT 14	PORT 14
8	If selection displayed is not SYN , then scroll through the options by pressing the NEXT ENTRY P key until SYN is displayed. (Select SYN using the DOWN B arrow key).	SYN	SYN
9	If selection displayed is not EQUIRATE then scroll through the options by pressing the NEXT ENTRY P key until EQUIRATE is displayed. (Select EQUIRATE using the DOWN B arrow key).	EQUIRATE	EQUIRATE
10	If selection displayed is not 56K then scroll through the options by pressing the NEXT ENTRY P key until 56K is displayed. (Select 56K using the DOWN B arrow key).	50 to 768K	56K
11	If selection displayed is not CL-HIGH then scroll through the options by pressing the NEXT ENTRY P key until CL-HIGH is displayed. (Select CL-HIGH using the DOWN B arrow key).	CL-HIGH CL-RTS-DCD CL-DTR-CTS	CLK-HIGH

LESSON 35 AN/FCC-100(V)7 & 9X PROGRAMMING PORT 14 FOR SYNC EQUIRATE NRZ 56 KBS CONFIGURATION

STEP	OPERATOR ACTION	MESSAGE DISPLAYED	SELECT
12	If selection displayed is not RX-INT then scroll through the options by pressing the NEXT ENTRY P key until RX-INT is displayed. (Select RX-INT using the DOWN B arrow key).	RX-INT RX-EXT	RX-INT
13	If selection displayed is not TX-INT then scroll through the options by pressing the NEXT ENTRY P key until TX-INT is displayed. (Select TX-INT using the DOWN B arrow key).	TX-INT TX-EXT	TX-INT
14	If selection displayed is not MINIMUM then scroll through the options by pressing the NEXT ENTRY P key until MINIMUM is displayed. (Select MINIMUM using the DOWN B arrow key).	CENTERED MINIMUM	MINIMUM
15	If selection displayed is not NEG-MARK then scroll through the options by pressing the NEXT ENTRY P key until NEG-MARK is displayed. (Select NEG-MARK using the DOWN B arrow key).	POS-MARK NEG-MARK	NEG-MARK
16	Press STORE to " save " this SYN PORT 14 CONFIGURAION into the OFFLINE B-CONFIG memory.	SYN	
17	Press the NEXT ENTRY P key. Notice that PORT 15 is now flashing . (Select PORT 15 using the DOWN B arrow key).	PORT 15	PORT 15
18	If selection displayed is not UNUSED , then scroll through the options by pressing the NEXT ENTRY P key until UNUSED is displayed. (Select UNUSED using the DOWN B arrow key).	UNUSED	UNUSED

**LESSON 35 AN/FCC-100(V)7 & 9X PROGRAMMING PORT 14
FOR SYNC EQUIRATE NRZ 56 KBS CONFIGURATION**

STEP	OPERATOR ACTION	MESSAGE DISPLAYED	SELECT
19	Press STORE to "save" this UNUSED PORT 15 CONFIGURATION . notice that PORT 15 is flashing.		

**END OF AN/FCC-100(V)7 & 9X PORT 14 SYN
EQUI NRZ 56 KBS CONFIGURATION**